



215 - 12th Avenue NE
Valley City, ND 58072-0905

1-800-437-8011
triwg@triwg.com
www.triwg.com

FOR CUSTOMER ASSISTANCE

As a future reference, we suggest
you record the information listed
below for quick accessibility.

Model No.: _____

Serial No.: _____

Purchase Date: _____

Purchased From: _____

Tri W-G® Service:
1-800-437-8011
triwg@triwg.com

USER MANUAL

P/N: 920-002-023

For

Bariatric Hi-Lo Mat Table **TWG.9.2.72.BM** *(with Instructions for Use)*



Read this manual before installing, operating, or
maintaining this table. Failure to follow safety precautions
and instructions could cause a system failure and result in
serious injury, death or property damage.

LIMITED WARRANTY REGISTRATION CARD ENCLOSED

TABLE OF CONTENTS



INTRODUCTION	2
1.0 RECEIVING INSPECTION	2
2.0 UNCRATING	2
3.0 INSTALLATION	2
4.0 SAFETY/PRECAUTIONARY INSTRUCTIONS	3
5.0 INTENDED USE	4
6.0 INTENDED USER PROFILE	4
7.0 OPERATING INSTRUCTIONS	4
8.0 MAINTENANCE	6
9.0 SYMBOLS, INDICATORS, and DEGREE OF SAFETY	7
10.0 WARNINGS and USAGE HINTS	8
11.0 OTHER HAZARDS	9
12.0 NOTICE: SERVICE STABILIZER BOLTS	10
13.0 SPECIFICATIONS	10
14.0 STARTUP CONDITIONS	12
15.0 OPERATING CONDITIONS	12
16.0 STORAGE CONDITIONS	12
17.0 TRANSPORT CONDITIONS	12
18.0 NOTICE	12
19.0 TROUBLESHOOTING	13
20.0 REPLACEMENT PARTS LOCATION SCHEMATIC	14
20.1 REPLACEMENT PARTS	15
21.0 SYSTEM SCHEMATIC	16
22.0 DISPOSAL	16
WARRANTY	17
DISCLAIMER	17

INTRODUCTION

The purpose of the User Manual is to introduce the authorized user to the operating instructions on how to use and work with this medical device safely, and to conduct routine preventative maintenance procedures on the device. For this goal to be achieved, it is essential that all the authorized users/operators (“user”) read this manual carefully, and understand and practice the precautionary safety measures recommended in it. The owner and/or operating authority determines who the user is.

ANYONE OPERATING THIS DEVICE MUST READ THIS USER MANUAL.

1.0 RECEIVING INSPECTION

1.1 Inspect for visible damage of the container. If there is outside damage, note on the shipping documents, and report to commercial carrier. Determine whether or not to accept or refuse the container. Sign if appropriate.

2.0 UNCRATING

2.1 Upon acceptance of the container, inspect for any damage to the device immediately following uncrating. In the event the device is damaged, **DO NOT** use table if damaged, file a merchandise damage report immediately with the delivering carrier. **DO NOT** return damaged merchandise to Tri W-G® unless instructed to do so. Call for a Return Authorization Number prior to returning any merchandise. **DO NOT** use table if it has been damaged.

2.2 Keep the cardboard liner on top of the mat table while moving mat table to the desired location. This will prevent damage to the frame and/or cushion while moving the mat table down hallways, through doorways, etc.

2.3 Remove all other packaging material from the mat table, except for the cardboard cushion liner/protector.

2.4 Properly dispose of/or recycle all packaging material.

3.0 INSTALLATION

3.1 **WARNING! Excessive Weight Hazard.** Use appropriate pallet jack(s), lifting devices, and/or equipment, adequate to lift approximately 1250 lbs minimum, and we recommend four or more people to move mat table. Failure to do so may result in personal injury, death, and/or property damage. When moving the table to its desired location, use proper moving/lifting techniques and/or body mechanics per commercial carrier and/or the facility handling protocol or guidelines; this due to its immense weight and overall size.

3.2 There is no assembly required.

3.3 The mat table should be placed in a location based on its intended use. Position the table in an area having flat/level floors so that the mat table is not distorted out of alignment. By following this instruction, the caster levelers and/or dual locking casters with brakes will function as intended to achieve maximum stability.

3.4 The caster levelers should be in the down position and/or the dual locking casters should have their brakes locked at all times except for moving. **DO NOT** move the mat table with a patient on the table.

3.5 Connect or plug-in the power cord to a properly grounded 120 Volt AC or 220-240 Volt AC receptacle, conforming to the relevant state and nationally recognized electrical codes, and follow the procedure outlined in the Safety/Precautionary Instructions.

3.6 The power supply cord serves as a disconnect device or as the on/off switch. Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord. **DO NOT** handle plug with wet hands. The receptacle shall be installed near the mat table and shall be easily accessible. The mat table has an appliance inlet with external accessible fuses in the line and neutral. The replacement fuses must be 5 x 20mm-10 Amp-Time Lag Fuses with High Breaking Capacity. When changing the fuses, one must unplug the power supply cord from the main source of power. It is advisable to have this type of Time Lag Fuse close at hand in the event of an electrical malfunction, which may burn the fuse out.

3.7 Arrange power supply cord away from the traffic area and where it will not be tripped over.

3.8 **DO NOT** use with an extension cord.

3.9 Upon connecting the power supply cord to a grounded receptacle, test mat table to determine electrical functionality.

3.10 **STAY ALERT**, watch what you are doing and use common sense.


4.0 SAFETY/PRECAUTIONARY INSTRUCTIONS

4.1 Once again, please have anyone who is authorized to use this mat table read, understand, and practice the safety and precautionary instructions recommended in this user manual. All operators should use common sense, know and fully understand the hazards and risks associated with using and/or operating this Tri W-G,[®] Inc. mat table prior to operating it.

4.2 **NEVER LEAVE THE PATIENT UNATTENDED.** Close attention is necessary when patients are children and/or disadvantaged.

4.3 Never place ones hand or feet, nor the patients' hand or feet, near any of the working mechanisms or gap areas on the table when raising or lowering the table, backrest, and/or kneegatch sections. And **DO NOT** place or leave objects or items of any kind underneath the base frame of the table at any time; example: foot stool left under mat table when the top frame is moving.



4.4 Whenever you see this symbol:  it signifies "Caution", and is used as a "General Warning Sign"; You and/or Your Patients' Safety is Involved.

4.5 During table operation, immediately stop the mat table operation, if anything unusual is observed or unusual sounds are heard coming from the mat table.

4.6 The SKF operating system is double insulated for protection from Electromagnetic Interference ("EMI"). The system is designed to provide reasonable protection against harmful interference in a typical medical installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used for its intended purpose, in accordance with the instructions, may cause harmful interference to other devices in the surrounding area. Interference can lead to data loss, problems with computers, monitors, cell phones, various other wireless applications, and signal interruptions, to name a few.

The SKF operating system meets, when used for its intended purpose, all applicable provisions of the Low Voltage Directive 2006/95/EC and of the Directive of Electromagnetic Compatibility 2004/108/EC;

Collateral Standard: Electromagnetic compatibility EN 60601-1-2, 2007 on EHA1/3, STJ, RU2, ECO, MAX3, and SCUxx (x: any alphanumeric character) for accessories and products. Used Standards are EN 60601-1, 1990 +A1+A2; EN 60601-12006; EN 60601-1-2, 2007. The SCU and VCU also meet when used for its intended purpose ANSI/AAMI ES60601-1, "Medical Electrical Equipment-Part 1: General Requirements for Basic Safety and Essential Performance: (3rd Ed.).

The electrical specification on the Power Supply Unit, PN 900-010-112, are as follows: EMI Filter - CISPR 22/EN55021 Level "B"; and has full Medical EN 60601 approval; UL 60950/UL 60601-1. Radiated EMI - CISPR 22/EN55021 Level "B"; and, EN60601, 3rd Ed.

However, there is no guarantee that EMI will not occur in a particular installation. If this equipment does cause harmful interference to other devices, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Relocate the device.
- * Increase the separation between various devices and/or equipment.
- * Connect the device into a receptacle on a different circuit.
- * Call a facility service technician for assistance.

4.7 **DO NOT** use this mat table to play on or as a play area, no matter what the age of the patient or individual may be. It is a Class I Medical Device, called a mat table. And **DO NOT** store or allow any object, of any kind, under the hi-lo mat table at any time. No medical claims are made with regard to a patient using the device. Tri W-G,[®] Inc. shall not be liable for any damage, death or injury caused, directly or indirectly, from the misuse of this device/mat table; and the user shall indemnify Tri W-G,[®] Inc. from and against all costs, damages and expenses (including legal expenses) arising from any such misuse.

5.0 **INTENDED USE**

It is a powered table intended for medical purposes (Class I Device) that is an electrically operated flat surface table that can be adjusted to various positions. It is used by patients with circulatory, neurological, or musculoskeletal conditions to increase tolerance to an upright or sitting position; [21CFR890.3760]. At no time should patients be left unattended on the mat table.

6.0 **INTENDED USER PROFILE**

It is intended to be used by Licensed Physical Therapists, Assistant Physical Therapists, Occupational Therapists, Assistant Occupational Therapists, and licensed rehab specialists utilizing a prescribed therapeutic protocol, written by a licensed medical practitioner or physician. It is not intended to be used by maintenance staff, installers, patients and/or lay persons.

7.0 **OPERATING INSTRUCTIONS**

7.1 **Adjust Height**--To raise or lower the mat table, simply touch the up or down arrow key on the hand switch. The low voltage hand set has operating power of VDC/mA of 12/50.

7.2 **Duty Cycle**--System is an intermittent operation; 1 minute on, 9 minutes off.


7.3 **Capacity**--The table is intended to support **1000 lbs** (453.6 Kilograms), evenly distributed over the mat table top.

7.4 **Casters, Standard**--The standard caster is a leveling caster. It is a mobile and transportable mat table, and may be moved from one location to another with the aid of the supporting leveling casters. No patient(s) and/or individuals whatsoever are allowed on the table during transportation of the table. The casters are only used for the purpose of moving the table from one place to another. Once

the table is positioned in its dedicated working place, stabilize and level the mat table; to do so, use a 15/16" open end wrench and turn the leveling nut left or right, depending on whether you want to raise or lower the leveler. Adjust all four levelers, making sure they are down enough to raise the caster wheel off the floor slightly, insuring a non-movable position of the table. The levelers are not only used to level the device, but as a means to stabilize the table in a non-movable working position. **DO NOT** position the levelers so that it twists/distorts the table frame; as it may put the lifting mechanism in a stressed state, shortening the lifespan of the table.

Casters, Optional--The optional caster is a total locking twin wheel directional caster. It is a mobile and transportable mat table, and may be moved from one location to another with the aid of the supporting twin wheel casters. No patient(s) and/or individuals whatsoever are allowed on the table during transportation of the table. The casters are only used for the purpose of moving the table from one place to another. Once the table is positioned on a level area, in its dedicated working place, totally lock all four casters. Activating the total locking caster is accomplished by placing the lever, in front of the twin wheels, to the desired position, as shown in photo 7.4.1 below. There are three positions: 1) lever straight forward or centered, which allows the caster to freely swivel; caster swivels and wheels turn; 2) lever to the left of center (*when facing the caster*) locks the caster swivel movement only, directional mode (wheelbarrow style), leaving the wheels to turn; 3) lever to the right of center (*when facing the caster*) locks the caster swivel movement and the wheels for total locking of caster and wheels. **DO NOT** position the mat table on an uneven floor area that may twist/distort the table frame; as it may put the lifting mechanism in a stressed state, shortening the lifespan of the table.

7.4.1

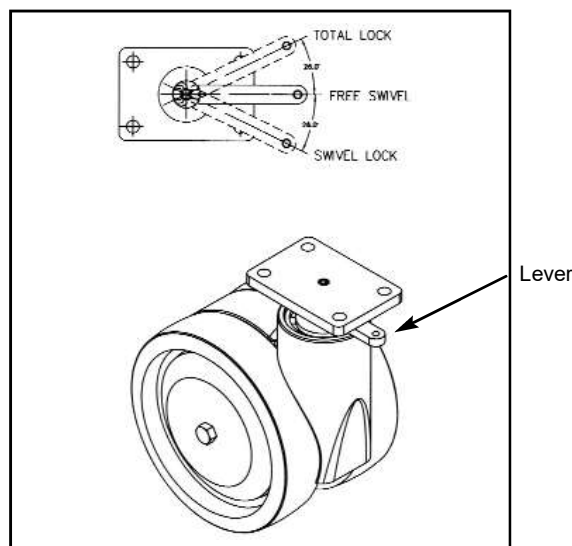

7.5 Hi-Lo, Adjusting--Use the handset and press the up or down key to operate. Always check to make absolutely sure there are no objects under the table or near the top frame when lowering or raising the mat table. It takes very little time to make a second check if you have left the area prior to your next hi-lo adjustment. Never leave the mat table with a patient on it. An example of an object that can easily make its way under the mat table is a step stool; and there are many more objects that lie around or are near a mat table that can get shoved under the mat table.

7.6 Table Section, Adjusting w/Patient--**DO NOT** place the patients' entire weight or body on a specific section of the mat table that you are going to adjust. The backrest is for the back, not the patients' entire body, and carries a maximum static uniform load on the backrest of 300 lbs. Same goes for the kneegatch section. It also carries a maximum static uniform load on the kneegatch section of 300 lbs. Make sure all hands, arms, feet or other objects are not in the table gap areas.

7.7 User--**Never** allow the patient to operate the mat table. Only trained personnel authorized to use the mat table shall operate the mat table.


8.0 **MAINTENANCE**

8.1(a) The table is equipped with a state-of-the-art linear actuator system, having a lifespan for each component of the system as follows: The SCU Control Unit (Tri W-G® PN 900-010-111) has a lifespan of approximately 10 years or 100,000 double-strokes. The SCU Control Unit is only suitable for inside applications and must not be subjected to weathering strong UV radiation or corrosive or explosive air. The linear actuator RUNNER™ (Tri W-G® PN 900-010-091) is designed for a life of approximately 10 years or 20,000 double-strokes (with authorized usage). The Matrix (Tri W-G® PN's 900-010-113 and 900-010-114) has a service life of approximately a maximum of 10,000 double-strokes with a stroke of 200mm or less. Double-stroke is defined as one extension and one retraction stroke combined. However, conducting routine preventative maintenance checkups are a must. One must routinely check the actuator for wear on the end mounts and connecting bolts, for unusual noises, for actuator wobbling when extending or retracting the spindle, and that it is operating smoothly, as minimums. Due to normal wear, it may be necessary to replace the linear actuator during the lifespan of the table. The actuator is not-servicable in the field. Call customer service for a replacement actuator.

8.1(b) The Emerson Power Supply Unit (Tri W-G® PN 900-010-112) has a lifespan of approximately 8 years.

8.2 Once a month, and/or as may be needed, check the actuator spindle end for a gap that looks like the one shown in photo 8.2.1 below. If this gap looks closed or like it has been crushed or squeezed, please call the Tri W-G,® Inc. Service Department at 1-800-437-8011.

8.2.1

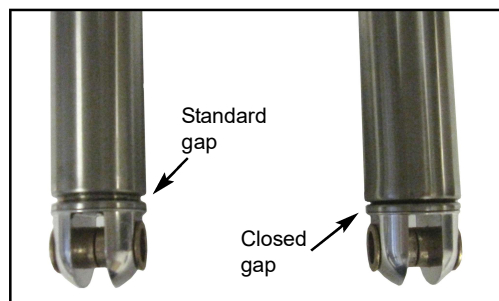

8.3 Due to normal wear, it may be necessary to replace the handset or the power cord. Call our customer service for replacement parts and/or installation instructions.

8.4 Cleaning the vinyl cover is accomplished with water and a mild detergent. Do not use Peroxide, Hylex, Lysol, strong or aggressive cleaning agents as they will discolor and reduce the life of the vinyl. The water used for cleaning, including chemical additives, must be pH-neutral. And liquids must not touch the actuator(s) during retraction or extension. A soft dust cloth will work to remove dust and lint on the steel frame when necessary. The mat table frame should be wiped down using a dry cloth to remove dust/lint on a regularly scheduled basis--keep free of dust. Cleaning the cover should be done after each patient procedure is complete and prior to new patient being placed on the table.

8.5 Inspection and maintenance/repair shall be made on a regular and/or periodic basis, which shall encompass the entire table. This includes, but is not limited to, the following: all moving parts, casters, actuators, backrest and knee gatch (if applicable), cushion (vinyl, velcro, stitching, foam), broken welds and/or cracks, bushings, nuts, bolts, screws, handset, power cord, wire holding clips and snaps, etc., to name a few. Replacement of worn or failed parts shall be replaced immediately, or as is deemed necessary. All inspections and maintenance/repair activities shall be recorded by owner facility. Operator should notify all users to discontinue using the table if the safety of operator and/or patient is eminent. Call Tri W-G,® Inc. Service Dept at 1-800-437-8011 and report any potential safety concerns.

8.6 Any repair should be performed by trained or certified service personnel.

9.0 **SYMBOLS, INDICATORS, and DEGREE OF SAFETY**



Mandatory action sign; Read User Manual Caution: General Warning Sign.



Mandatory action sign; Read User Manual Caution: General Warning Sign.



Read User Manual; contains useful information.



General Warning Sign.



Foot Crush Point



Type B Equipment: Equipment providing a particular degree of protection against electric shock, particularly regarding allowable leakage current and reliability of the protective earth connection.



Protective Earth Ground: This product is Class I equipment in which protection against electric shock does not rely on BASIC INSULATION only, but which includes an additional safety precaution in that means are provided for the connection of the EQUIPMENT to the protective earth terminal in the fixed wiring of the insulation in such a way the ACCESSIBLE METAL PARTS cannot become LIVE in the event of a failure of the BASIC INSULATION.



Earth (ground).

WATER

Protection against harmful ingress of water--Prevent mat table from being subjected to water sprays or water hosing.

ANESTHETICS

Not suitable for use in the presence of a flammable anesthetic mixture with air or oxygen or nitrous oxide.

ELEC. RATING

Input: 100-240 VAC; 10 A Max; 50/60 Hz



Medical Device




Date of Manufacture Expressed as: YYYYMMDD

10.0 **WARNINGS and USAGE HINTS**

Any serious incident that has occurred in relation to this device should be reported to Tri W-G and the competent authority of the Member States in which the user and/or patient is established.

Please make note of the meaning of the following warnings and usage hints:

Note: indicates usage information that helps the user to use the product correctly and efficiently or to understand the properties of the product.

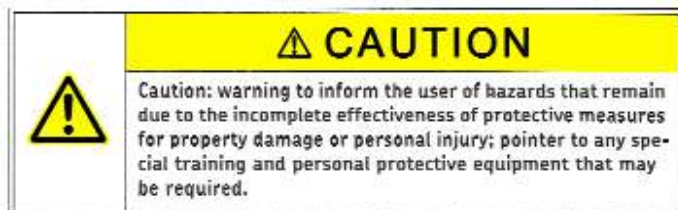


11.0 OTHER HAZARDS

The manufacturer has constructively, and with protective measures, minimized the effects of existing hazards. Pay attention to the following hazards and the possible countermeasures given in the following:



915-001-282

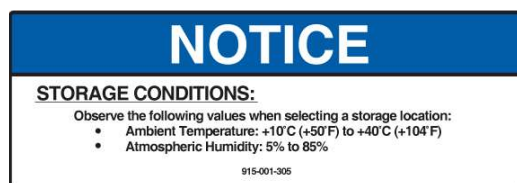

915-001-300




915-001-301



915-001-298



915-001-296

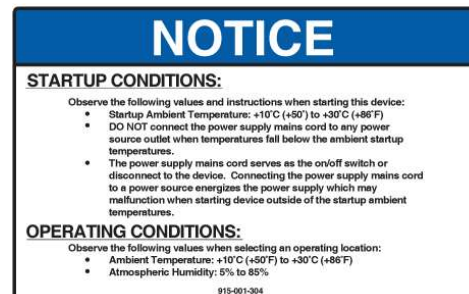

915-001-304




915-001-306

12.0 **NOTICE: Service Safety Bolts**

In the event your mat table operating system requires service, there are two safety bolts located underneath the caster bracket for safe keeping, until needed for servicing the mat table (refer to photo 12.1). Do not discard these safety bolts. These safety bolts will be used to hold the mat table top in a safe fixed height mode so the table top frame does not come down on the service technician during the service procedure. The service kit will instruct the service technician on when, how and where to place them. Again, they have a specific purpose, to insure safety, during a service procedure and should not be removed from their location. Do not place hands or objects in the slide guide tube openings located in the lower base frame.

12.1

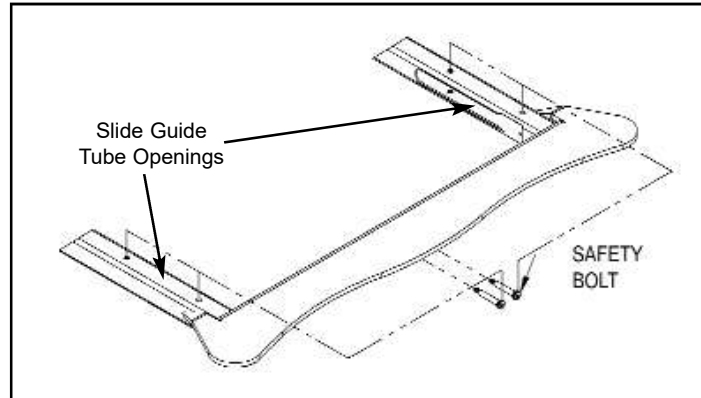

13.0 **SPECIFICATIONS:**

Item No. TWG9272.BM: Width-72"; Length-84";

Ht. Range- 18.7"-36.4" to table top frame/20.7"-38.4" to top of cushion, or 21.95"-39.65" to table top frame/23.95"-41.65" to top of cushion (*heights nominal, depending on caster type*)

13.0 SPECIFICATIONS CONT'D:

Lifting Weight Capacity: A maximum static uniform load of 1000 lbs.

Upholstered Top: 2" polyfoam with vinyl cover standard; Vinyl Coated Nylon & Herculite, optional. Has rounded corners with steel frame as a bumper guard. Vinyl conforms to California Fire Code 117.

Casters: Four Footmaster leveling casters are standard. Four locking twin wheel directional Darco 6" casters are optional.

Frame: Heavy gauge steel.

Finish: Polyurethane Pearl Grey standard; Porcelain optional.

Accessories: Sit-to-Stand, Guard Rails, Various Exercise Accessories available. Contact Tri W-G[®], Inc. Sales Dept for information about accessories. Accessories have a maximum static load of 500 lbs for the Sit-to-Stand and Guard Rails, 250 lbs for T-Bar, and 100 lbs for Exercise Poles.


Handset: Handset for adjusting various table positions is low voltage-VDC/mA of 12/50. Power supply serves as main disconnect device.

Electrical: Input: 100-240 VAC; 10 A Max; 50/60 Hz.
Duty Cycle: Is on/off intermittently 1 min/9 min, respectively.

UL[®] Class: This medical device has been tested to the following standards:
ANSI/AAMI ES60601-1:2005
CSA C22-2 No. 60601-1:2008
IEC 60601-1:2005

Fuse: Newark in One Part No. 88K2035 (0001.2514)
UL Standard 248-14, UL File Number E41599
Rated Voltage: 250VAC, 150VDC; Rated Current: 10A; Breaking Capacity: 500A-1500A;
Characteristic: Time-Lag T; Admissible Ambient Air Temp: -55C to 125C; Climatic Category: 55/125/21
ACC to IEC 60068-1; Tube Material: Ceramic; Endcap Material: Nickel Plated Copper Alloy;
Unit Weight: 1.16 G; Storage Conditions: 0-60C, Max 70% R.H.

Replacement Fuses: Four (4) replacement fuses are stored in the replacement fuse holder located on the outside power supply enclosure. Unscrew both thumb screws and use a simple push rod (ex: small drinking straw) to remove new fuses. Unplug mains power source prior to removing fuses and during installation of fuses to avoid electrical shock. In the event the two newly installed fuses blow out, **DO NOT** use the remaining two fuses without further inspection of the operating system. There may be something more than just a surge of power or an electrical overload that caused the fuses to blow. Call Tri W-G[®] Service Dept at 1-800-437-8011 or an electrician for assistance. Location of replacement fuse holder:

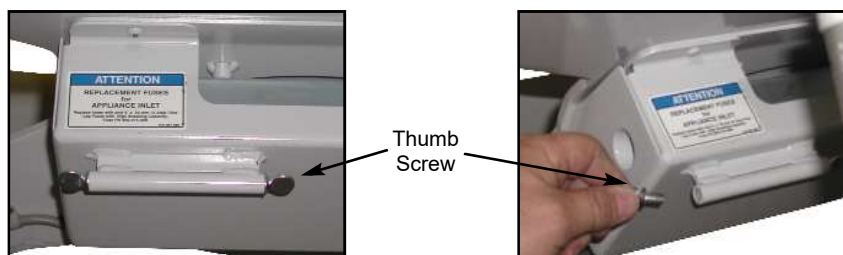

After using replacement fuses, immediately replace them in the event another fuse blowout occurs.

14.0 STARTUP CONDITIONS:

- 14.1 Observe the following values and instructions when starting this device:
- Startup Ambient Temperature: +10° C (+50° F) to +30° C (+86° F)
 - **DO NOT** connect the power supply mains cord to any power source outlet when temperatures fall below the ambient startup temperatures.
 - The power supply mains cord serves as the on/off switch or disconnect to the device. Connecting the power supply mains cord to a power source energizes the power supply which may malfunction when starting device outside of the startup ambient temperatures.

15.0 OPERATING CONDITIONS:

- 15.1 Observe the following values when selecting a operating location:
- Ambient Temperature: +10° C (+50° F) to +30° C (+86° F)
 - Atmospheric Humidity: 5% to 85%

16.0 STORAGE CONDITIONS:

- 16.1 Observe the following values when selecting a storage location:
- Ambient Temperature: +10° C (+50° F) to +40° C (+104° F)
 - Atmospheric Humidity: 5% to 85%

17.0 TRANSPORT CONDITIONS:

- 17.1 Observe the following values when transporting product:
- Ambient Temperature: -32° C (-25° F) to +50° C (+122° F)
 - Atmospheric Humidity: 5% to 85%

18.0 NOTICE:

18.1 Design changes may have occurred in the product since this user manual was published. The technical information found within this manual was correct at the time this user manual was approved for publication.

18.2 Tri W-G,[®] Inc. does not assume any risk or liability for attachments, or their effects on this device, if the attachments are not manufactured, sold by, and expressly approved by Tri W-G,[®] Inc.

18.3 When parts are required, use only those parts authorized by Tri W-G,[®] Inc.

18.4 If any information contained in this publication is not understood, the user should contact Tri W-G,[®] Inc. for assistance at 1-800-437-8011.

18.5 **DO NOT** perform any electrical or general service on the table prior to disconnecting the power supply cord which serves as the on/off switch to the table.

19.0 TROUBLE SHOOTING

19.1 Table does not move up or down:

19.1.1 Check power cord connection to main power source.

19.1.2 Make sure main power source is receiving power.

19.1.3 Check handset and/or foot switch, making sure it is plugged in.

19.1.4 Thermal protector may have activated, and you must allow the system to cool down. Duty Cycle is on/off intermittently 1 min/9 min, respectively.

19.1.5 Check appliance inlet fuses making sure they are not burned out. If they are, replace with new fuses stored in the fuse holder attached to the power supply enclosure.


19.2 Table tries to move but only one side:

19.2.1 Table is lifting on one side, and seems stuck while the top is beginning to twist or torque. One actuator may have shut down while the other actuator is operating. Reverse the direction in which you desire to adjust to--if you were lowering the table top, try to raise the table top; therefore, allowing the non-operating actuator spindle to catch up with the spindle position of the other. If the table still does not function, call the Customer Service at 1.800.437.8011 for instructions. Do not continue using the table.





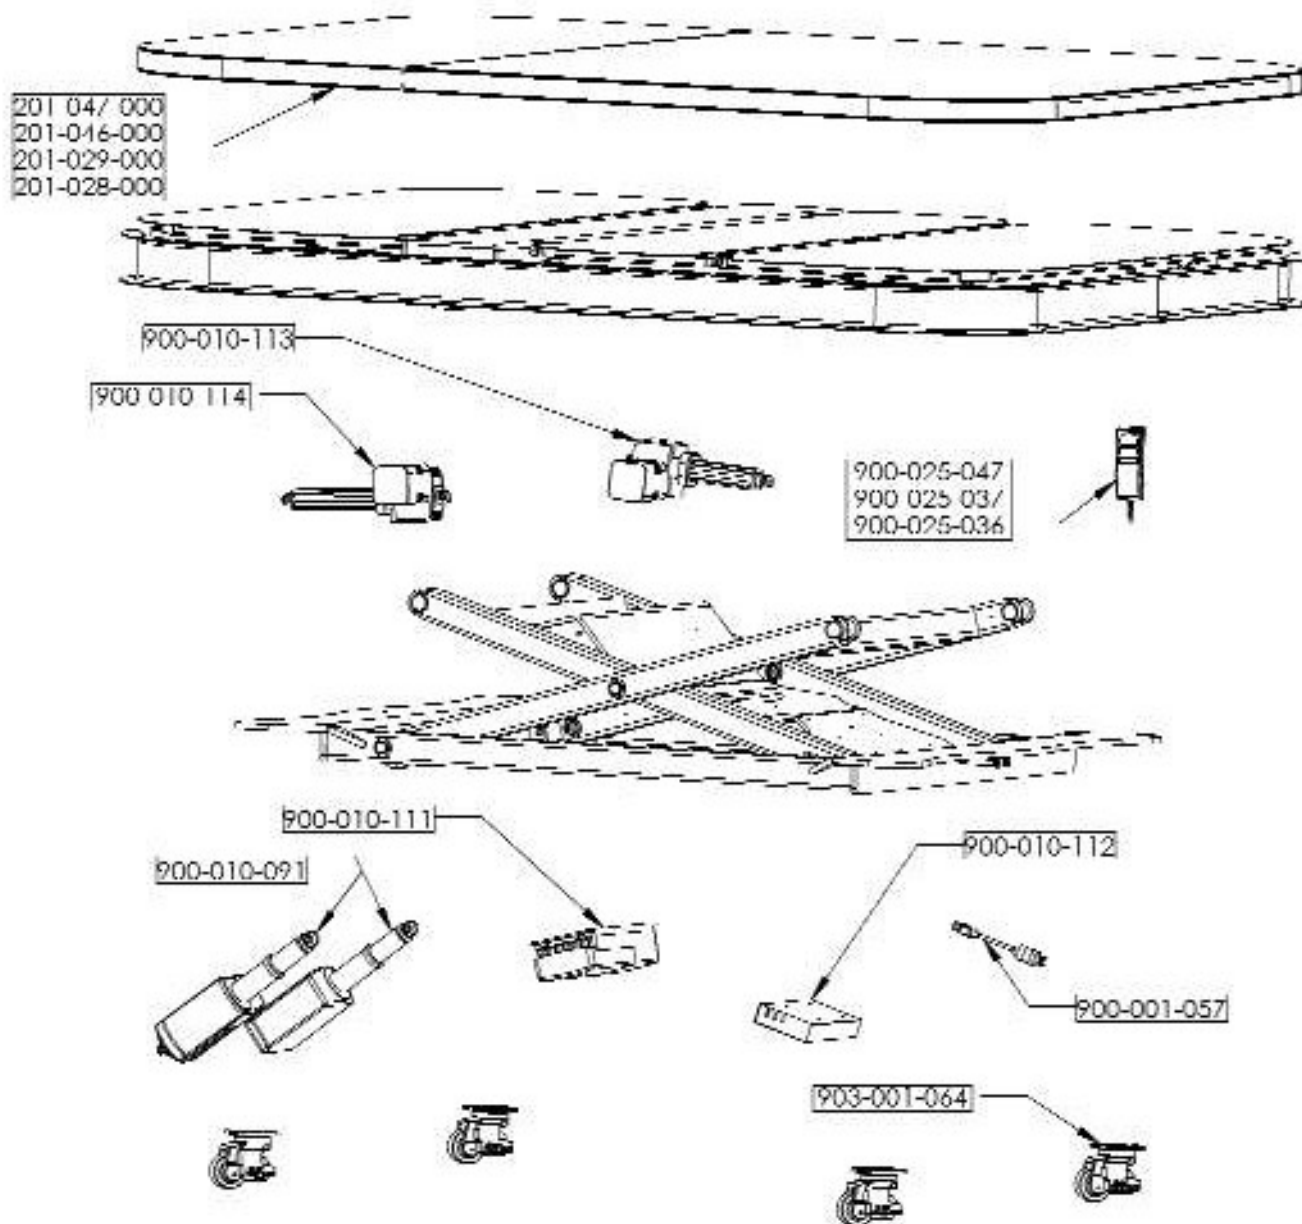



19.3 Tried everything and nothing works to resolve the dilemma--contact Tri W-G,[®] Inc. Customer Service by calling 1.800.437.8011.

20.0 REPLACEMENT PARTS LOCATION SCHEMATIC


This replacement parts location schematic shows the service parts which may require service sometime in the future as the result of normal wear and tear. These parts can be ordered from the Tri W-G,[®] Inc. Service Dept by calling 1-800-437-8011. In the event any additional information is required, beyond what is shown below, please contact the Tri W-G,[®] Inc. Service Dept; which may include but not limited to--electrical diagrams, general service parts such as washers, bolts, connectors, etc.; and questions in general.

 

20.1 REPLACEMENT PARTS

			
201-028-000 ONE SECTION CUSHION 60"	201-046-000 TWO SECTION CUSHION 60"	201-029-000 ONE SECTION CUSHION 72"	201-047-000 TWO SECTION CUSHION 72"
			
900-010-091 ACTUATOR, RU25	900-010-114 ACTUATOR BACKREST	900-010-113 ACTUATOR KNEE GAICH	900-015-006 10 AMP FUSE
			
900-010-112 POWER SUPPLY UNIT	900-010-111 CONTROL UNIT	903-001-064 CASTER, STANDARD	903-001-059 CASTER, (OPTION)
			
900-025-036 HANDSET ONE ROW	900-025-03/ HANDSET TWO ROW	900-025-04/ HANDSET THREE ROW	900-001-057 POWER CORD 120 VAC
			
900-025-044 FOOTSWITCH, ONE CHANNEL (OPTION)	900-025-049 FOOTSWITCH, TWO CHANNEL (OPTION)	900-025-048 FOOTSWITCH, THREE CHANNEL (OPTION)	900-001-064 POWER CORD 240 VAC

21.0 SYSTEM SCHEMATIC

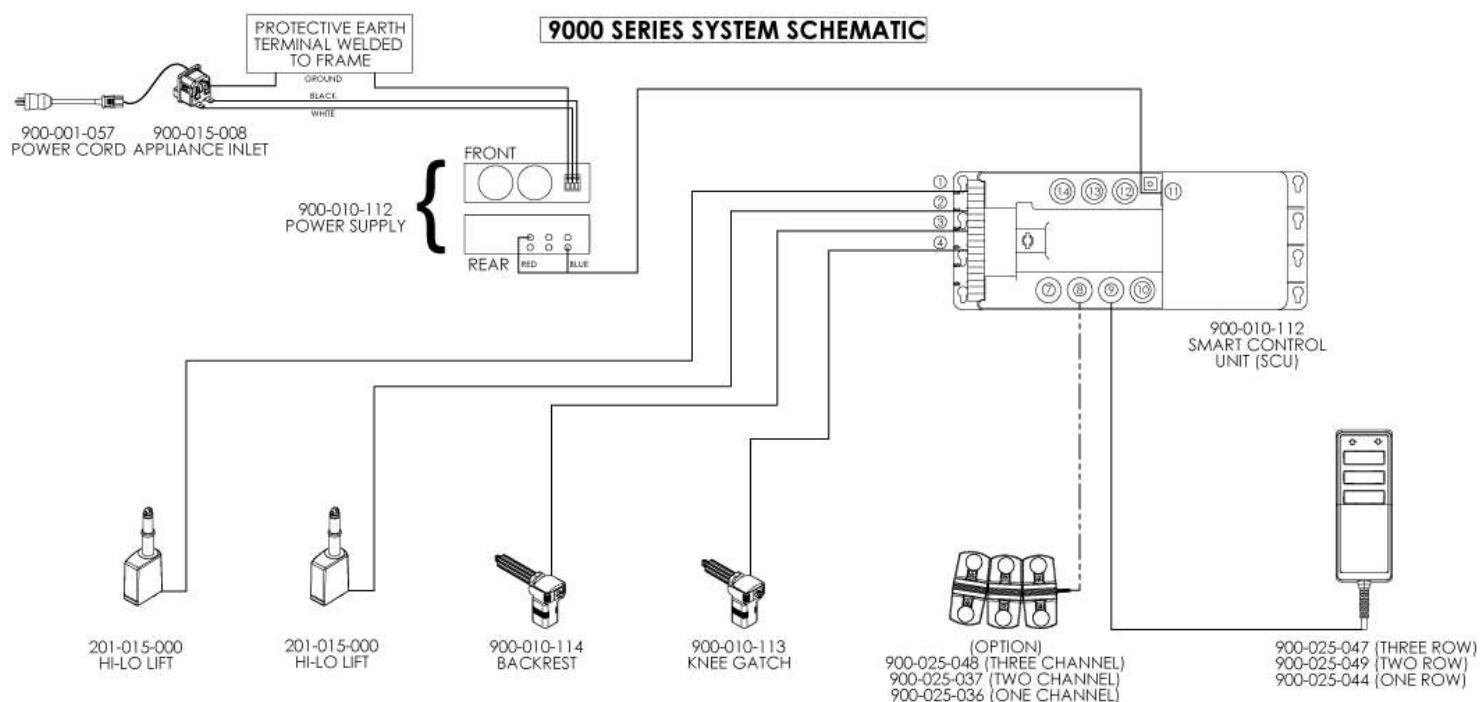

22.0 DISPOSING OF THIS MEDICAL DEVICE

Deterioration in function, failure and/or the medical device has reached its life span, as a result of aging, wear, repeated use, or it has been determined to decommission it and/or dispose of it, must be done in a technically proper manner and in accordance with international, national, regional and/or local environmental regulatory requirements for disposing of medical devices. The owner of this medical device is responsible for its proper disposal.

LIMITED WARRANTY

This Product or Part is sold by Tri W-G,[®] Inc. under the limited warranties set forth in the following paragraphs. Such warranties are extended only with respect to the Purchase of the Product or Part as new merchandise directly from Tri W-G,[®] Inc. or a Tri W-G,[®] Inc. Authorized Dealer and are extended to the ultimate customer purchaser of the Tri W-G,[®] Inc. Product or Part.

Tri W-G,[®] Inc. warrants that each Product or Part sold hereunder shall be free of defects in material and workmanship for the Product warranty period identified as follows:

Ten Years: structural frame.

Two Years: operating system

One Year: hand and foot controls; upholstery.

(Please note the aforementioned limited warranty is limited to original owner and not transferable.)

in the case of Products and twelve months in the case of Parts from the date of delivery from Tri W-G,[®] Inc. or an authorized Tri W-G,[®] Inc. Dealer, whichever is later. Should defects appear in any products subject to this limited warranty and Parts subject to this limited warranty sold hereunder within the respective limited warranty period, Tri W-G,[®] Inc. will repair or replace under the terms of this limited warranty any defective Part or Parts or provide new or remanufactured Parts when the defective Part or Parts are returned to Tri W-G,[®] Inc. facilities at Buyer's expense upon (20) days prior written notice to Tri W-G,[®] Inc. Buyer will be charged for any replacement Parts when shipped to Buyer by Tri W-G,[®] Inc. When the defective Parts are returned to Tri W-G,[®] Inc. pursuant to Tri W-G,[®] Inc. returned goods authorization, charges will be waived.

This limited warranty does not apply to any Products or Parts which have been damaged through misuse, negligence or accident (including shipping damage) on the part of Buyer or any third party. This limited warranty does not apply to any Product in which Parts other than replacement Parts or Parts approved by Tri W-G,[®] Inc. have been used if said Parts are or may be the cause of failure.

FOR ANY BREACH OF WARRANTY, EXPRESSED OR IMPLIED, THE LIABILITY OF TRI W-G,[®] INC. IS HEREBY EXPRESSLY LIMITED, AND SUBJECT TO THE TERMS HEREIN, TO THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR PART WHICH SHALL APPEAR TO BE DEFECTIVE IN THE OPINION OF TRI W-G,[®] INC. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL TRI W-G,[®] INC. BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES. NO CLAIM FOR BREACH OF WARRANTY FOR PRODUCTS OR PARTS FURNISHED HEREUNDER SHALL BE ASSERTED AGAINST TRI W-G,[®] INC. MORE THAN TWENTY (20) DAYS AFTER THE EXPIRATION OF THE WARRANTY PERIOD.

DISCLAIMER

Every effort has been made to use accurate photography, drawings, product specifications and descriptions at the time of printing.

The contents of this publication are the copyright of the publisher and may not be reproduced unless prior written permission is granted. Every effort has been made to ensure the accuracy of the information contained in this Operator's Manual, but no liability can be accepted for any loss or damage whether direct, indirect, or consequential arising out of the use of the information contained herein. The label(s) on any of the products/components supercedes the copy and/or data that is in this User Manual. Copy, data and/or print on serial tags and labels attached to any of Tri W-G products and/or components supplied by other vendors used in Tri W-G products, shall supersede, any and all copy, data and/or print stated in this User Manual. However, because of continuous progressive product improvements, all specifications and descriptions are subject to change without prior notice.

Tri W-G[®] is a registered trademark of Tri W-G, Inc. UL[®] is a registered trademark of Underwriters Laboratories, Inc. All other company and product names are trademarks or registered trademarks of their respective owners.

Manufactured and Distributed by:



Phone: 1-800-437-8011

Email: triwg@triwg.com

215 12th Avenue NE

PO Box 905

Valley City, ND 58072-0905